


Universal Tilt Wall Mount

For 23" to 46" LCD Flat Panel Screens

NEW!

Medium sized screens are installed faster than ever with the new ST640. Its open wall plate architecture offers screen placement flexibility and easy access to electrical and cable management. Its exclusive pre-tensioned universal tilt screen adapters deliver the ultimate ease in horizontal screen adjustment and viewing angle flexibility.

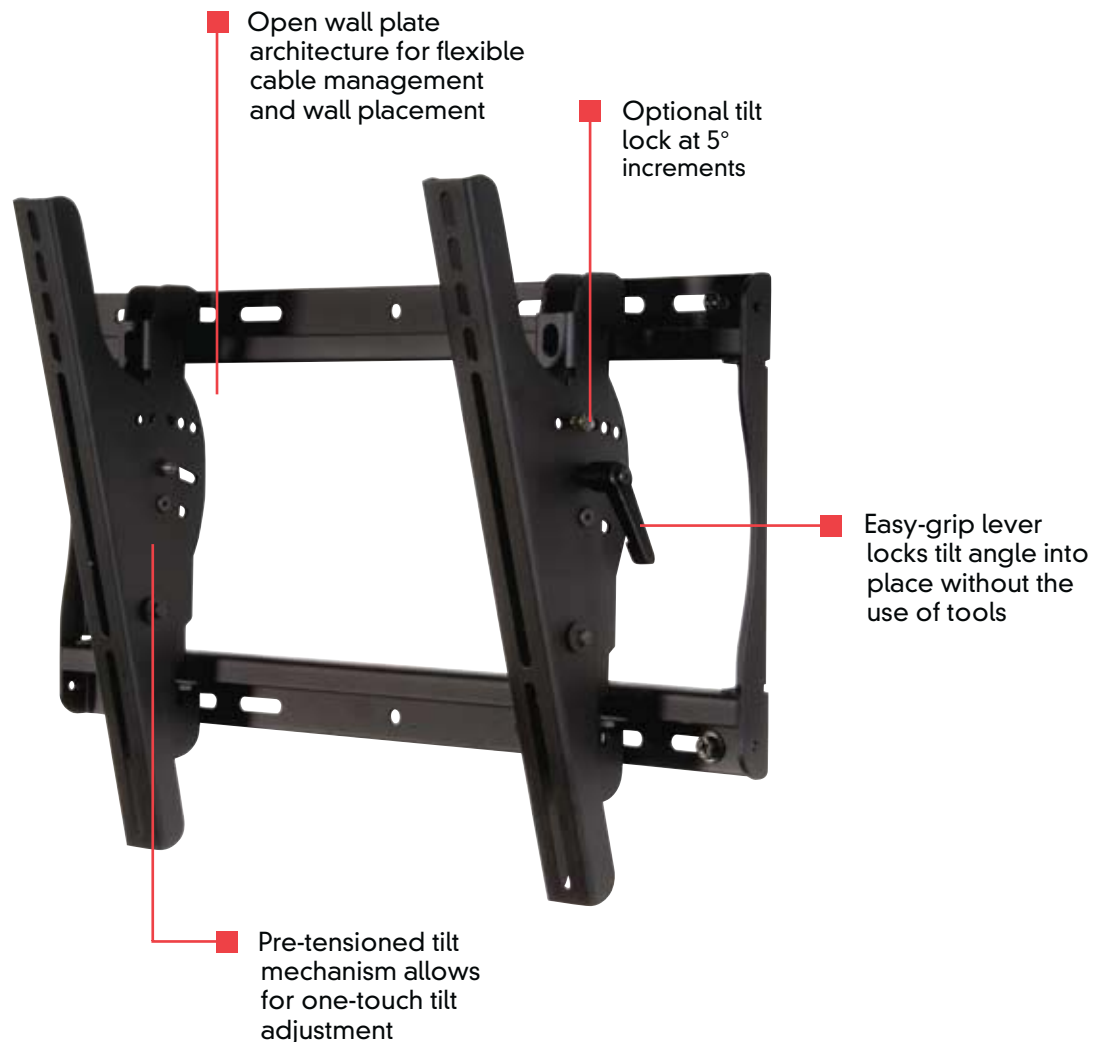



SmartMount® Universal Tilt Wall Mount

For 23" to 46" LCD Flat Panel Screens

Model Numbers

ST640, ST640-S (Security Models)
ST640P, ST640P-S (Standard Models)

Product Specifications

FEATURES

- Universal mount fits screens with mounting patterns up to 18" W x 12.94" H
- Open wall plate architecture allows for total wall access, increasing electrical access and cable management options
- Adjustable up to 15° of forward tilt and -5° backward tilt for optimal viewing angle
- Pre-tensioned universal tilt screen adapters allow for tilt adjustment without the use of tools
- Easy-grip lever locks the screen position into place
- Optional IncreLock™ feature offers fixed angles of -5°, 0°, 5°, 10°, 15°
- Horizontal screen adjustment of up to 6" (depending on screen model) for perfect screen placement
- Universal screen adapters easily hook onto wall plate for fast installation
- Mounts to wood studs, concrete, cinder block or metal studs (metal stud accessory required)
- Comes with Peerless' Sorted-for-You™ fastener pack with all necessary screen attachment hardware
- Integrated security options available
- UL listed

DIMENSIONS (W x H x D) 19.37" x 13.75" x 2.6" (49.2 x 34.9 x 6.6 cm)

LOAD CAPACITY 150 lb (68 kg)

PRODUCT WEIGHT 6.32 lb (2.86 kg)

FINISH Scratch-resistant fused epoxy

AVAILABLE COLORS Black: ST640, ST640P
Silver: ST640-S, ST640P-S

ACCESSORIES Metal Stud Fastener Kit (ACC415)

PATENT Patent pending

Package Specifications

PACKAGE CONTENTS Wall plate, universal screen adapters, mounting and screen attachment hardware

UNITS IN PACKAGE 1

PACKAGE SIZE (W x H x D) 20.37" x 10.06" x 3.5" (51.75 x 25.55 x 8.89 cm)

PACKAGE SHIP WEIGHT 8.5 lb (3.85 kg)

PACKAGE UPC CODE

ST640	735029235699
ST640P	735029235712
ST640-S	735029235705
ST640P-S	735029235729

WARRANTY Limited 5-year



Adjustable +15/-5° tilt



11972

LIT-0212

Peerless Industries, Inc.
3215 W. North Avenue,
Melrose Park, IL 60160

(800) 865-2112

(708) 865-8870

Fax: (708) 865-2941

www.peerlessmounts.com