



Item # \_\_\_\_\_

Job \_\_\_\_\_

## SUPER ERECTA SHELF® STERILE WRAP RACK

- **Solves Storage Problem:** Sterile wrap racks provide a safe, convenient place to hold wrap. Most sizes can be displayed prominently so that they are easy to locate. One sheet, or several sheets, at a time can be removed quickly and neatly. The wire bottom shelf, standard on all units, can be used to hold extra wrap, or less frequently used sizes.
- **Adjustable:** The carrier assembly which supports the bars is adjustable in 1" (25mm) increments along the height of the posts so that it can be positioned at a comfortable level for users whether seated or standing. The four bars can also be positioned in any of 18 slots along the carrier assembly.
- **Four Bars Standard:** All models come with four square bars as standard. Additional bars can be added as accessories, if needed.
- **Mobile:** 5" (127mm) polyurethane tread swivel casters provide easy maneuverability.
- **Two Sizes:** Sterile wrap racks come in 24" x 48" (610 x 1220mm) size and 24" x 60" (610 x 1525mm) size. All models are 68" (1730mm) in overall height. The 60" (1525mm) models will hold wrap up to 54" x 72" (1372 x 1829mm).



Close-up of Carrier Assembly



SUPER ERECTA SHELF®  
**Sterile Wrap Rack**



**InterMetro Industries Corporation**  
North Washington Street  
Wilkes-Barre, PA 18705  
www.metro.com

**33-22**



## SUPER ERECTA SHELF® STERILE WRAP RACK

### Specifications

Sterile Wrap Racks consist of four posts, four casters, a wire bottom shelf, three-sided top and intermediate frames, a two-piece carrier assembly, and four square support bars.

- **Posts:** Units have four 1" (25mm) diameter Super Erecta Shelf® posts, chrome-plated with rolled grooves in 1" (25mm) increments along entire height.
- **Casters:** Models SWR556DC and SWR566DC have four 5" (127mm) polyurethane tread swivel casters (5MP) as standard.
- **Bottom Shelf:** Chrome-plated.
- **Top and Intermediate Frames:** Top and intermediate frames are three-sided, chrome-plated snake frames.
- **Carrier Assembly:** Two piece assembly is stainless steel with welded collars.
- **Support Bars:** Support bars are 1" (25mm) square stainless steel.



### Dimensions

Shelf		Overall		Bottom Shelf Material	Frame Material	Post Material	Approx. Pkd. Wt.		Cat. No.
Width (in.)	Length (mm)	Height (in.)	Height (mm)				(lbs.)	(kg)	
24	610	48	1220	Chrome	Chrome	Chrome	88	38	SWR556DC
24	610	60	1525	Chrome	Chrome	Chrome	94	43	SWR566DC

### Accessories

#### Additional Support Bars

Length		Approx. Pkd. Wt.		Cat. No.
(in.)	(mm)	(lbs.)	(kg)	
48	1220	4	2	SWRB5S
60	1525	5	2.3	SWRB6S

**Covers** — Covers are available in white and a variety of colors in both coated and uncoated styles. Refer to catalog sheet 36.42 for additional information.

Width		Length		Height		Cat. No. Uncoated	Cat. No. Coated
(in.)	(mm)	(in.)	(mm)	(in.)	(mm)		
24	610	48	1220	62	1575	24x48x62UC	24x48x62C
24	610	60	1525	62	1575	24x60x62UC	24x60x62C

Manufactured by:



#### InterMetro Industries Corporation

North Washington Street, Wilkes-Barre, PA 18705

Phone: 570-825-2741 • Fax: 570-825-2852

For Product Information Call: 1-800-433-2232

Visit Our Web Site: [www.metro.com](http://www.metro.com)

L02-173


6/00

Printed in U.S.A.

2038

Information and specifications are subject to change without notice. Please confirm at time of order.



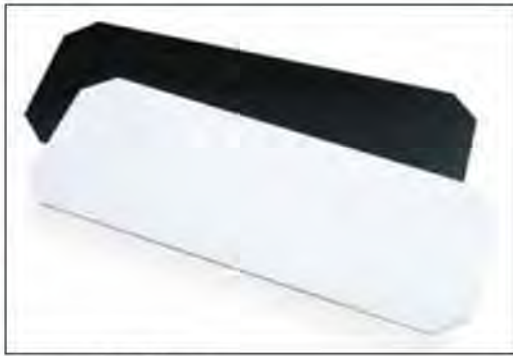

Decorators Shelf Inlays

**Decorators Shelf Inlays — 10.06**

Hardboard mats prevent small items from falling through wire shelves. Fit between posts and level with top of shelf edge. Reversible, black and white. Packed individually.

Width/Length (in.) (mm)		Cat. No.
14x36	355x914	1436BWI
14x48	355x1219	1448BWI
18x24	457x610	1824BWI
18x36	457x914	1836BWI
18x48	457x1219	1848BWI
24x24	610x610	2424BWI
24x36	610x914	2436BWI
24x48	610x1219	2448BWI




Clear Shelf Inlays

**Clear Shelf Inlays — 10.06**

Nearly invisible plastic mat retains open-wire look of shelves and allows light penetration. Sold in packages of 4.

Width/Length (in.) (mm)		Cat. No.
14x36	355x914	1436CI-4
14x48	355x1219	1448CI-4
14x60	355x1524	1460CI-4
18x36	457x914	1836CI-4
18x48	457x1219	1848CI-4
18x60	457x1524	1860CI-4

Width/Length (in.) (mm)		Cat. No.
21x36	530x914	2136CI-4
21x48	530x1219	2148CI-4
21x60	530x1524	2160CI-4
24x36	610x914	2436CI-4
24x48	610x1219	2448CI-4
24x60	610x1524	2460CI-4

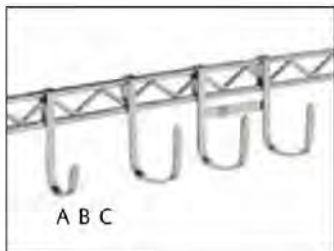

Snap-on Hooks

**Snap-On Hooks — 10.05**

Multi-purpose hooks in three styles attach to hanger rails, mounting rails or shelves for instant access.

Description	Height		Cat. No. Chrome	Cat. No. Black
	(in.)	(mm)		
Style A — Small	3/16	90	HK23C	HK23B
Style B — Large	3/16	90	HK25C	HK25B
Style C — Double	3/16	90	HK26C	



Garment Hanger Tube with Brackets

**Garment Hanger Tube with Brackets — 10.05**

Hanger tubes attach easily under Super Erecta shelves for hanging garments. Available in 18", 21" and 24" (457, 530 and 610mm) widths and in same length as shelves.

Tube Length (in.) (mm)	Approx. Pkd. Wt. (lbs.) (kg)	Shelf Width		
		18" (457mm)	21" (530mm)	24" (610mm)
24 610	2 1/2 1.1	AT2418NC	AT2421NC	AT2424NC
30 760	2 1/2 1.1	AT3018NC	AT3021NC	AT3024NC
36 914	3 1.4	AT3618NC	AT3621NC	AT3624NC
42 1066	3 1/2 1.6	AT4218NC	AT4221NC	AT4224NC
48 1219	3 1/2 1.6	AT4818NC	AT4821NC	AT4824NC
60 1524	4 1.8	AT6018NC	AT6021NC	AT6024NC
72 1828	4 1/2 2.0	AT7218NC	AT7221NC	AT7224NC