


SUPER ERECTA SHELF®

Suture Carts

- Quick Access To Sutures:** Specially designed slanted wire shelves let you organize and store sutures within easy reach.
- Instant Identification of Sutures:** Open wire construction and slope of shelves permit instant identification. No more searching — the sutures you need are in plain view.
- Inventory Control:** Suture cartons are neat and organized on the shelves for precise control of inventory. Eliminates duplication and confusion in ordering.
- Easy Loading & Removal of Cartons:** The slanted design of the shelves makes loading quick and simple. Shelves are self-feeding, so cartons are always at the front, within easy grasp.
- Four-Inch Retainers** serve as ledges at the ends of each shelf to prevent cartons from sliding off . . . can also be used as dividers to keep rows of cartons separated. Twelve are supplied with each cart.
- Five-Inch Casters** enable cart to be moved easily by one person. Brakes on front casters make it simple to lock cart in position when placed against wall.
- Available With Conductive Casters** on special order only.
- Chrome-Plated Finish**

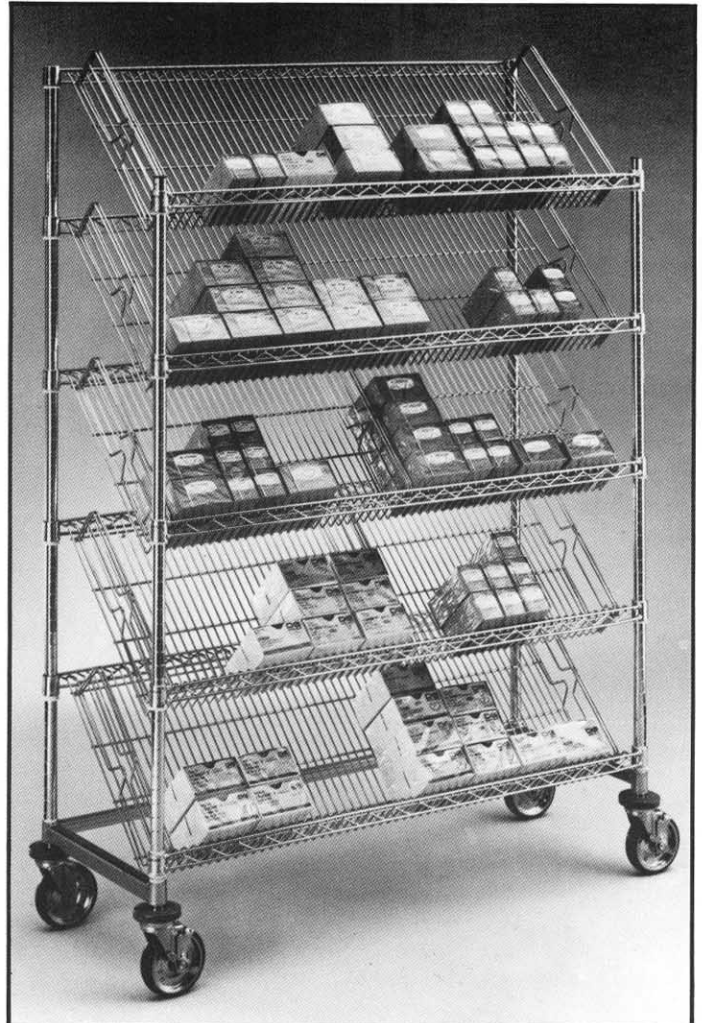

DC56EC

Copyright © 1984 InterMetro Industries Corp.



InterMetro Industries Corporation
Wilkes-Barre, PA 18705 • 717-825-2741

CATALOG SHEET

30.50

Suture Carts

Specifications


- **Posts:** Models DC36EC and DC56EC have two 54" (1372mm) chrome-plated posts (54UP) and two 63" (1600mm) chrome-plated posts (63UP).

Models DC15EC, DC16EC, DC35EC and DC55EC have four 54" (1372mm) chrome-plated posts (54UP).


- **Shelves:** Models DC16EC, DC36EC and DC56EC have five slanted Super Erecta Shelf® chrome-plated wire shelves.

Models DC15EC, DC35EC and DC55EC have four slanted Super Erecta Shelf® chrome-plated wire shelves and one flat Super Erecta Shelf® chrome-plated wire shelf on top.


- **Casters:** All models have 5" (127mm) polyurethane stem/swivel casters on the back posts and 5" (127mm) polyurethane stem/brake casters on the front posts.
- **Bottom Frame:** All models have a three-sided channel frame at bottom.
- **Retainers:** Carton of 12 shipped with each unit, all models.

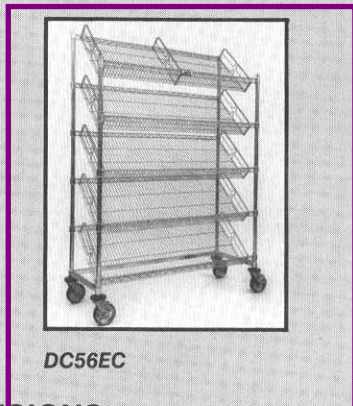

DC56EC

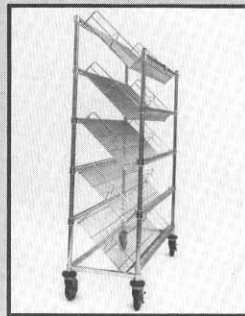

DC56EC
From Side

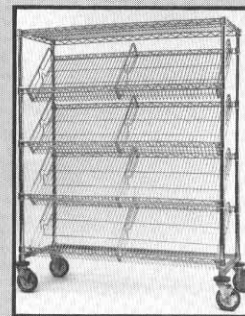

DC55EC

DIMENSIONS

Model No.	Shelves	Width		Length		Height		Approx. Pkd. Wt.	
		(in.)	(mm)	(in.)	(mm)	(in.)	(mm)	(lbs.)	(kg)
DC15EC	Four Slanted/One Flat	18	455	24	610	60	1525	103	46
DC16EC	Five Slanted	18	455	24	610	60	1525	112	50
DC35EC	Four Slanted/One Flat	18	455	36	910	60	1525	95	42
DC36EC	Five Slanted	18	455	36	910	70	1780	104	46
DC55EC	Four Slanted/One Flat	18	455	48	1220	60	1525	112	50
DC56EC	Five Slanted	18	455	48	1220	70	1780	123	55

ADDITIONAL SHELVES

1824DNC	18	455	24	610	10 1/2	5
1836DNC	18	455	36	910	14	6
1848DNC	18	455	48	1220	18	8

ACCESSORIES

COVERS* — Coated and Uncoated

(in.)	Width		(in.)	Length		(in.)	Height		Uncoated Cat. No.	Coated Cat. No.
	(mm)	(mm)		(mm)	(mm)					
18	455	36	910	54	1370	18x36x54UC	18x36x54C			
18	455	48	1220	54	1370	18x48x54UC	18x48x54C			

*Fit models DC35EC and DC55EC only.

RETAINER — Keeps different types of merchandise separated and in order.

Cat. No.	Size	
	(in.)	(mm)
DCR17C	4 x 17	102 x 432

PLASTIC SHELF MARKER — Snaps over shelf edge. Holds label 3"x1" (76x25mm).

Cat. No.	Size	
	(in.)	(mm)
9989P	3 x 1 5/16	76 x 33



InterMetro Industries Corporation
Wilkes-Barre, PA 18705